




Rhinestahl CTS

FutureDrive^{NG}+

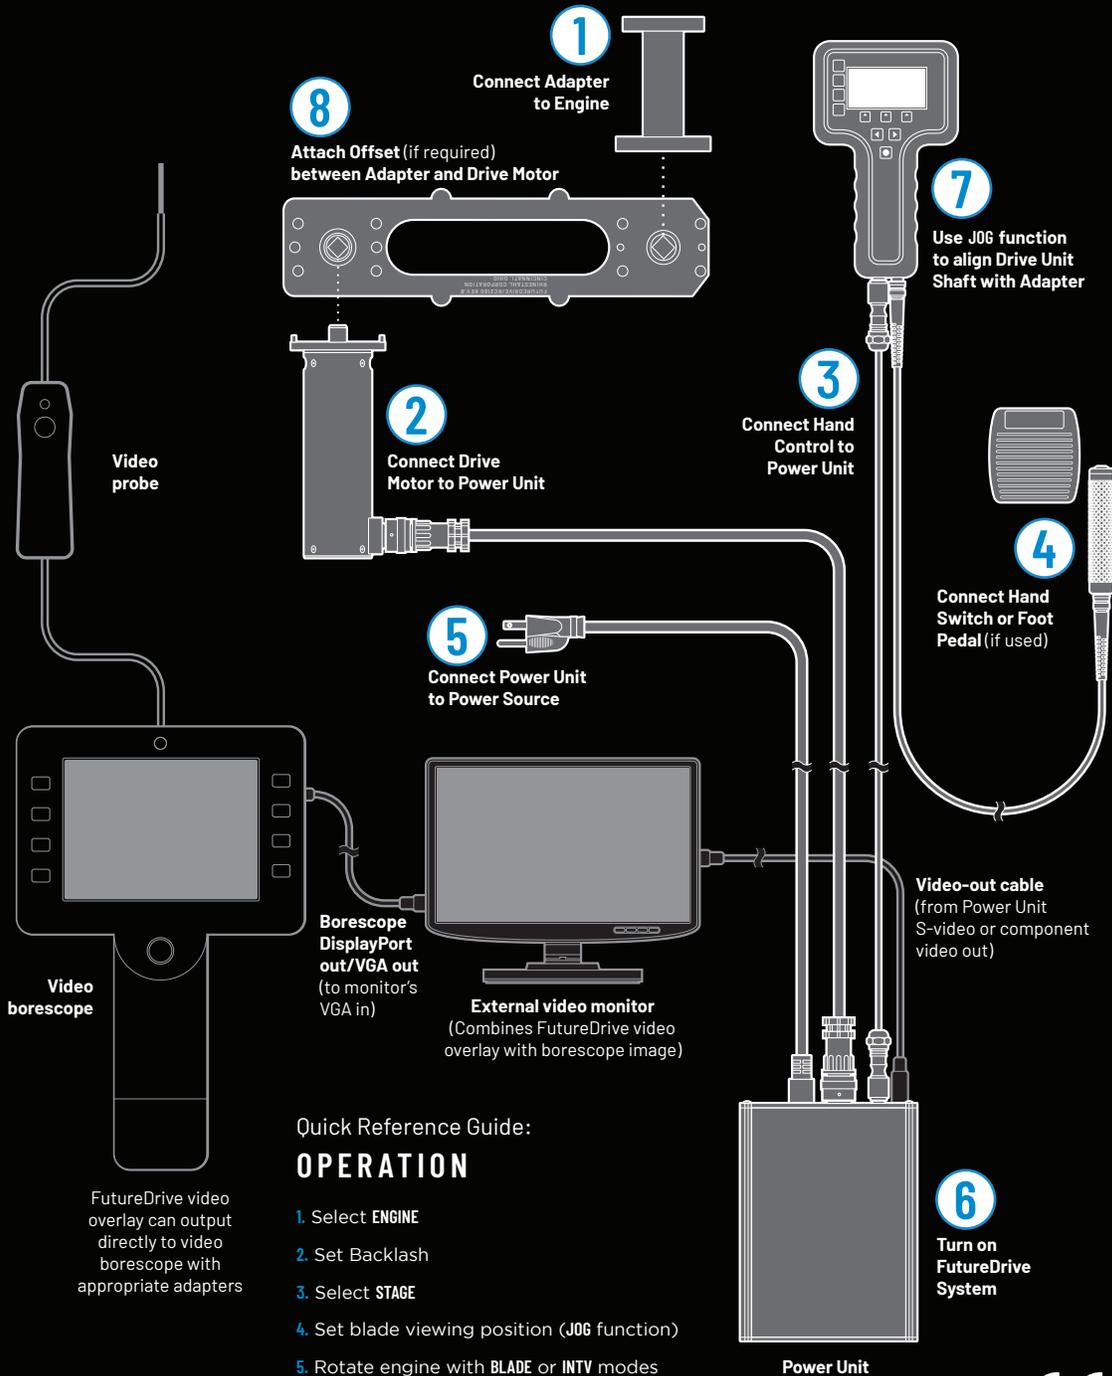

Quick Reference Guide:

OPERATION

1. Select **ENGINE**
2. Set Backlash
3. Select **STAGE**
4. Set blade viewing position (**JOG** function)
5. Rotate engine with **BLADE** or **INTV** modes

FutureDrive video overlay can output directly to video borescope with appropriate adapters

